

SONG[®]

Bath & Kitchen Masterpieces[®]
The Leader in Style and Price[™]

Installation and Care Guide

Undercounter Sinks

This Guide is for the following Undercounter Sinks:

S-8210-U: ELEGANTE[™]
S-8230-U: RENAISSANCE[™]
S-8240-U: TEMPO[™]
S-8280-U: CALYPSO[™]
S-8410-U: ENCORE[™]
S-8430-U: PRIMA[™]
S-8440-U: MAXIMA[™]
S-8480-U: MINUET[™]
S-8610-U: LEGATO[™]
S-8630-U: HARMONY[™]
S-8640-U: ALLEGRO[™]
S-8670-U: OPUS[™]

Thank you for allowing **SONG** the honor of earning your business.

This Guide will help you install and care for your **SONG** Masterpiece Sink so that it will be Impressive for a Lifetime[®] !

SONG Bath is committed to product quality therefore specifications, options and details in this Guide are subject to change without notice in the interest of product improvement.

Items Needed for Installation



Safety Glasses
Screwdrivers
Tape Measure
Pencil
Level

Sink Template
Sealant
Support framing materials (optional)
Rags

Important Information


CAUTION: Risk of personal injury or product damage. Cast iron sinks are very heavy. Be sure to have assistance when lifting the sink.

IMPORTANT: Using a wood support frame is an installation option for all undercounter cast iron sinks, but is required for non-rectangular sinks. Refer to the install using a wood support frame section for this option.

NOTE: The sink illustrated in this guide may differ from your actual product but the installation steps in this guide still apply.

- Only an experienced installer should install this product.
- Two people should install this product to ensure a safe and damage-free installation.
- Unpack the new sink and inspect it for damage prior to installation. Keep sink in its protective box until you are ready to install it.
- Install the sink so future removal from underneath the countertop is possible without damaging the countertop. In case the sink needs to be removed, locate the fasteners for easy access after installation. Do not use adhesive sealants.
- Prior to installation select the proper fasteners and use the proper techniques to ensure that the cabinet walls, sink support framing, hardware and fasteners will support a minimum of 300 lbs (136kg). Inspect the drain and supply tubing; replace if necessary.
- Observe all local plumbing and building codes.
- All information in these instructions is based on the latest product information available at the time of publication. **SONG** reserves the right to make revisions in the design of products without notice.


1. Using the Undermount Sink Kit for Installation

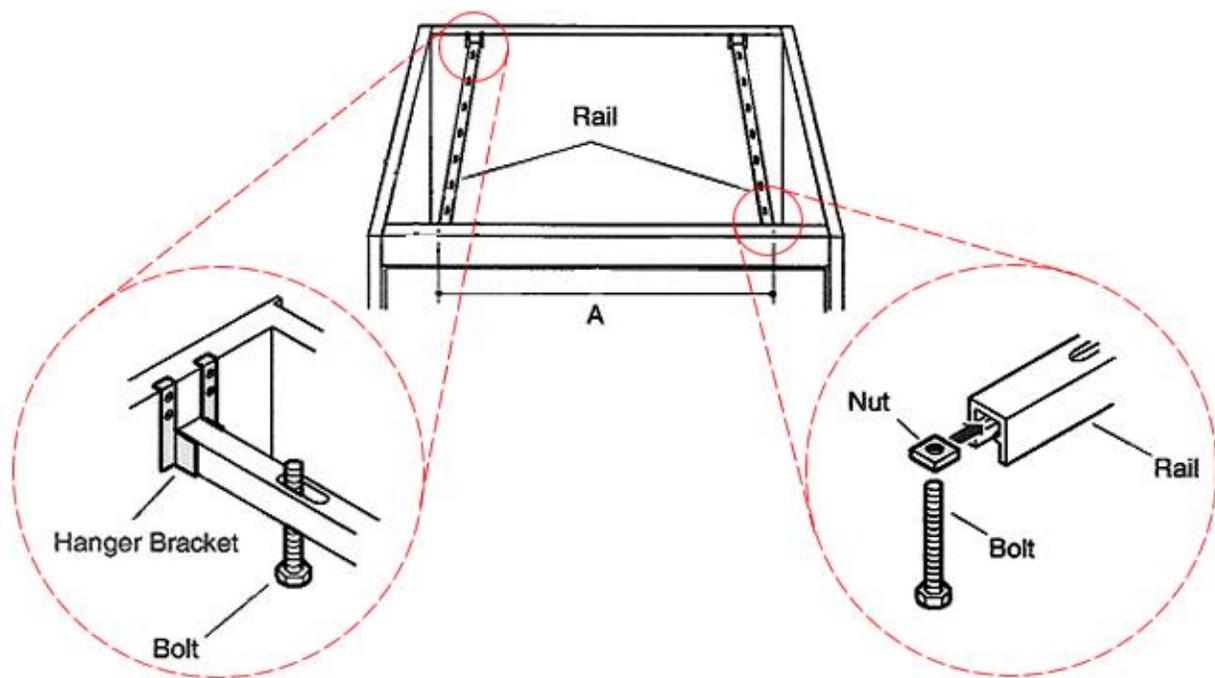

For Non-rectangular sinks, do not use the Undermount Sink Kit, instead use a Wood Frame Support and skip to the section titled "Using a Wood Frame Support".


- Thread the bolts into the nuts just a few turns to attach the nut to the bolts.
- Position the assembled nuts and bolts at one end of the rail and slide the nuts into the slots in the rails.
- Move the bolts in the rail so the bolts are where the corners of the sink will be located.
- Put hanger brackets on both ends of each rail after all the assembled nuts and bolts are in the rail.
- Place the rail assemblies into the cabinet locating them in a front to back direction as shown above.
- Measure the overall width of your sink. This distance is shown above as the "A" dimension. Move the rail assemblies so they are between the outside edges of this "A" dimension as shown above.
- After moving the rail assemblies so they are between the outside edges of the "A" dimension, then mark the screw holes on the hanger brackets on the cabinet.
- Drill starter holes in the cabinet for the hanger bracket screws using a 1/8" (3mm) drill.
- To continue the installation, please proceed to the section titled "Install the Sink".

1. Using a Wood Frame Support for Installation


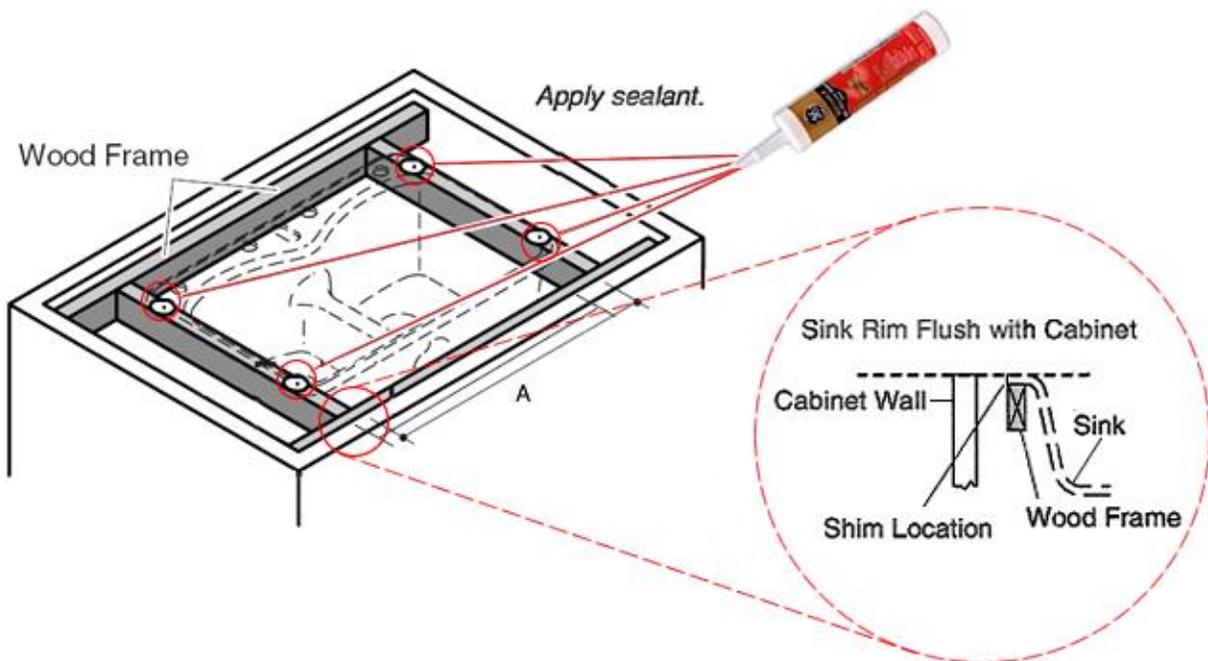


- Measure the overall width of your sink. This distance is shown above as the “A” dimension. Make sure there is adequate clearance between the faucet handles and the backsplash or finished wall.
- Construct a wood frame for the inside of the cabinet so that each side is between the outside edges of this “A” dimension as shown above. Allow adequate clearance for the faucet valves and sink basin. Ensure the wood frame will support all four sides of the sink rim.
- The frame should be constructed so that once the sink is installed; the top of the sink rim will be flush with the top of the cabinet walls. Use shims if required to bring the sink rim flush with cabinet walls.
- Once the frame is in the correct position as shown above fasten it to the cabinet taking care to locate the fasteners for easy access in case the sink needs to be removed in the future.
- Before installing the sink onto the wood frame apply a 1” (2.5cm) bead of sealant at each corner of the wood frame where it will contact the sink.



2. Install the Sink

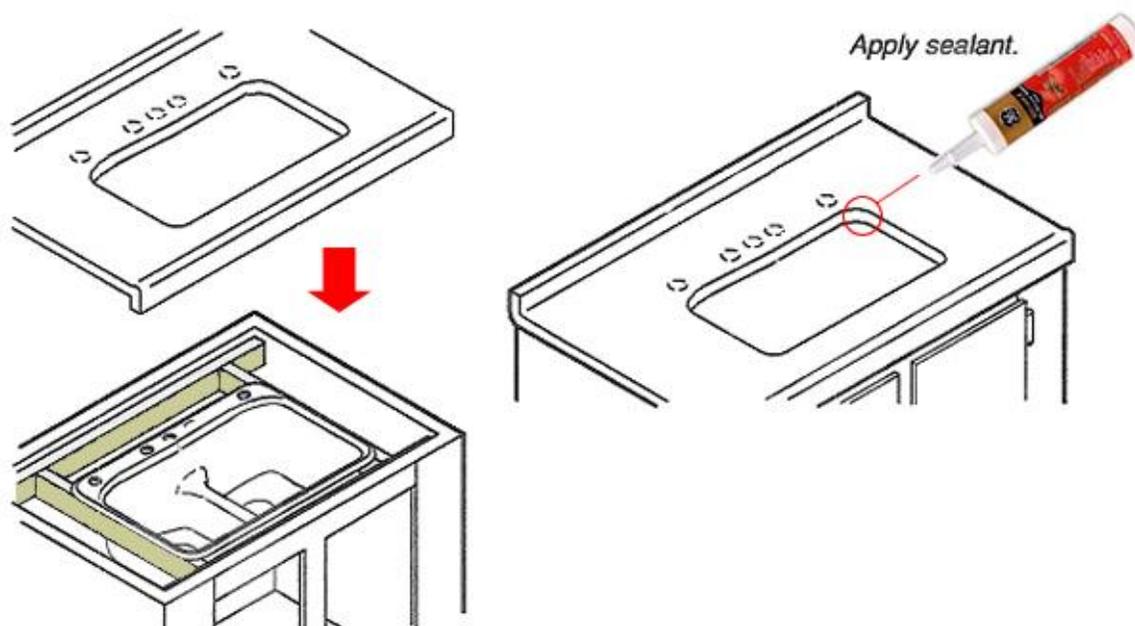

- First check that the sink faucet holes and the countertop faucet holes lineup before securing the countertop to the cabinet. Do a test run of putting the sink
- Lower the sink on to the Sink Undermount Sink metal rails or wooden framing in the cabinet taking care to make sure they support the sink.
- Make sure that the sink is properly positioned on the framing and level.
- Next secure the countertop over the sink and onto the cabinet frame.
- Apply a thin bead of silicone sealant where the sink meets the countertop.
- Take care to immediately wipe away any excess sealant with a damp rag so it is a neat smooth seam. If there are any uneven seams, fill them to eliminate any voids.
- Allow the sealant to cure before proceeding.
- When the sealant is cured, attach the faucet, strainer and other plumbing fittings to the sink.

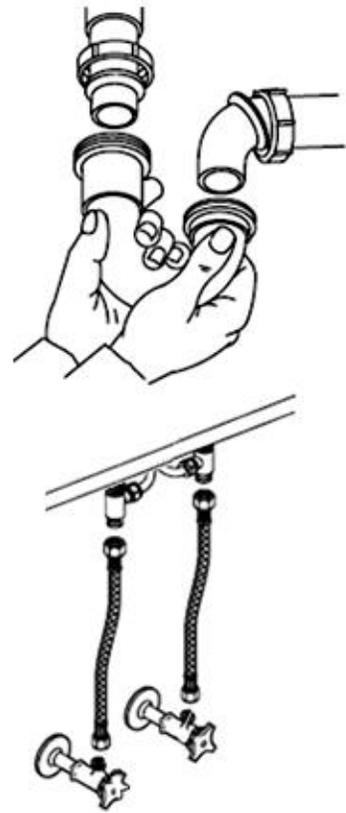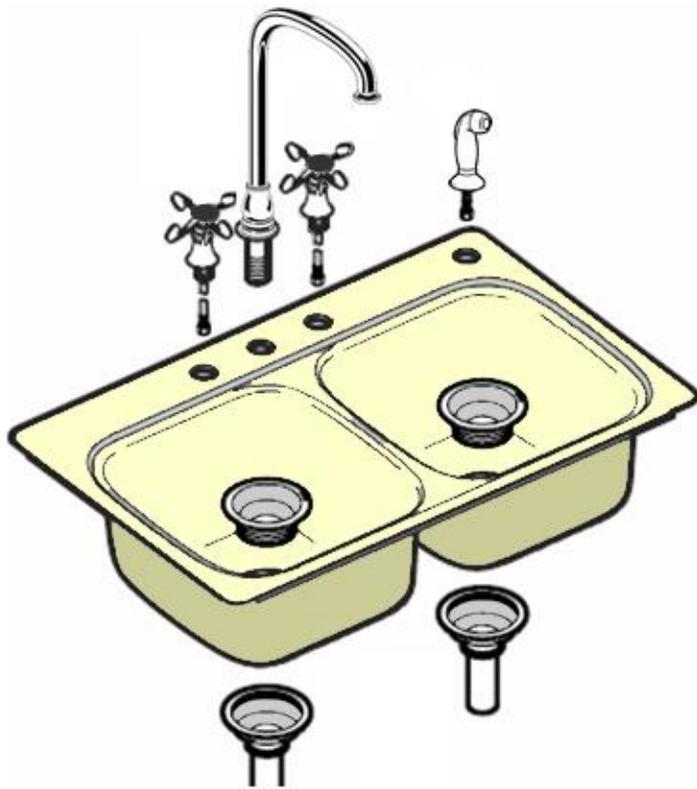

- Finally run water into the sink and check all connections for leaks and adjust if needed.

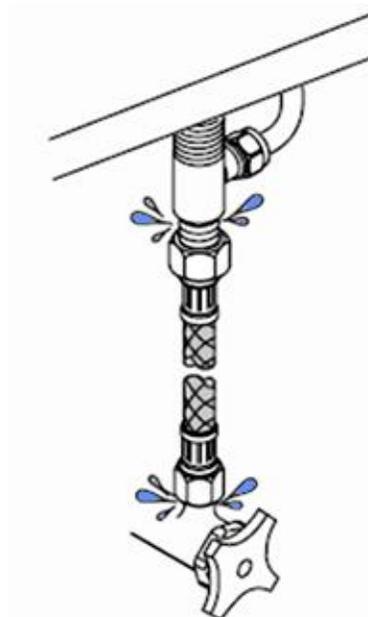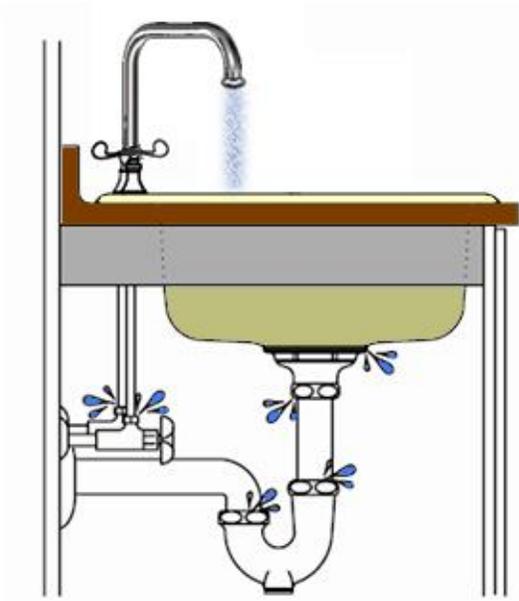

Care and Cleaning

IMPORTANT: Never use an abrasive cleanser or abrasive brush/scouring pad to clean cast iron. For best results, keep the following in mind when caring for your **SONG** product:

- Always use a mild liquid dishwashing cleaner or soap and warm water to clean your sink. Never use an abrasive cleaner that can scratch or dull the finish. Always test a new cleaning solution on an inconspicuous area before applying to the entire surface to make sure it is not abrasive.
- Do not allow cleaners to sit on the surface. Wipe surfaces clean and rinse completely with water immediately after applying cleaner. .
- Always use a soft, dampened sponge or cloth for cleaning. Never use an abrasive tool such as a rough brush or iron scouring pad to clean surfaces.
- Be careful not to leave staining materials in contact with the surface for extended periods of time.
- The ideal cleaning technique is to rinse thoroughly with water to remove any remaining cleaning solution and then to use a towel to dry any water from the surface after each use.

SONG Cast Iron Limited Warranty

SONG warrants the cast iron components of products to be free of defects in material and workmanship during normal residential use for as long as the original consumer purchaser owns his or her home. Gloss reduction, scratching, staining and alkaline etching of the finish over time due to use, cleaning practices or water or atmospheric conditions, are not manufacturing defects but are indicative of normal wear and tear. This warranty applies only to **SONG** Cast Iron products installed in the United States of America, Canada or Mexico (North America).

If a defect is found in normal residential use, **SONG** will, at its election, repair, replace or make appropriate adjustment. Damage caused by accident, misuse, or abuse is not covered by this warranty. Improper care and cleaning will void the warranty. Proof of purchase (original sales receipt) must be provided to **SONG** with all warranty claims. **SONG** is not responsible for labor charges, installation, or other incidental or consequential costs. In no event shall the liability of **SONG** exceed the purchase price of the product.

If the cast iron product is used commercially or is installed outside of North America, **SONG** warrants the cast iron product to be free from defects in material and workmanship for one (1) year from the date the product is installed, with all other terms of this warranty applying except duration. All other components other than the enameled cast iron component carry **SONG's** one-year limited warranty unless otherwise specified.

If you believe that you have a warranty claim, contact **SONG**, either through your Dealer, Plumbing Contractor, Home Center or E-tailor, or by writing: **SONG** Bath., Attn.: Customer Service, 146 Old Kings Highway, New Canaan, CT 06940, USA. Please be sure to provide all pertinent information regarding your claim, including a complete description of the problem, the product, model number, color, finish, the date the product was purchased and from whom the product was purchased. Also include your original invoice. For other information or to obtain the name and address of the service and repair facility nearest you, call 1-800-353-0313 from within the USA, 1-203-966-3043 from outside the USA.

SONG AND/OR SELLER ARE PROVIDING THIS WARRANTY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANT ABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SONG AND/OR SELLER DISCLAIMS ANY LIABILITY FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states/provinces do not allow limitations of how long an implied warranty lasts or the exclusion or limitation of such damages, so these limitations and exclusions may not apply to you. This warranty gives the consumer specific legal rights. You may also have other rights that vary from state/province to state/province. This warranty is to the original consumer purchaser only, and excludes product damage due to installation error, product abuse, or product misuse, whether performed by a contractor, service company or the consumer.



This is the **SONG exclusive written warranty.**